

# MAGELLAN™

## K32 - User's Quick Reference Guide

### KEYPAD OVERVIEW

#### Off Light (orange†)

On = Disarmed  
 Off = System armed  
 †Some models feature a red LED instead of an orange one

#### AC Light (yellow)


ON = Power on  
 OFF = Power off

#### StayD Light (green)

ON = StayD on



= Press once + [MASTER CODE] for Quick Menu Programming)

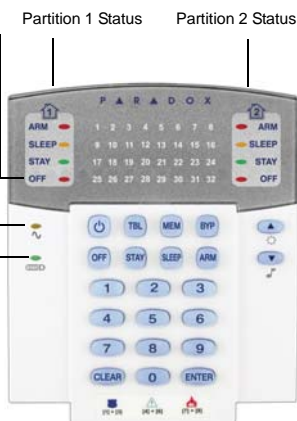

K32 Keypad

#### Arm (red), Sleep (yel), Stay (grn):

On = Partition armed  
 Off = Partition disarmed  
 Flash = Exit Delay  
 Fast Flash\* = Exit Delay (final 10 sec.)  
 Fast Flash\* = Partition in alarm

#### \* Audible Indicators:

Continuous beep = Alarm  
 Variable beep = Fire alarm  
 Intermittent beep = Beginning of exit delay  
 Fast beep = Final 10 sec. of exit delay

#### [TBL] Trouble display

ON = Trouble(s) occurring

#### [MEM] Alarm memory display

ON = Alarm(s) occurred

#### [BYP] Bypass programming

ON = Zone(s) bypassed

#### Zone Display:

The numbers [1] to [32] correspond to zones 1 to 32 respectively. Open or entry delay zones are illuminated, and flash in alarm.

### ARMING AND DISARMING

TO ARM  
 WHEN LEAVING...



TO ARM  
 WHEN STAYING...



#### To Regular Arm:

1. Close all zones in the desired partition.
2. Enter your [ACCESS CODE]\*\* or [ARM] + [ACCESS CODE]

#### To Stay Arm:

1. Press the [STAY] key.
2. Enter your [ACCESS CODE]\*\*.

#### To Sleep Arm:

1. Press the [SLEEP] key.
2. Enter your [ACCESS CODE]\*\*

To Disarm:  
 [OFF] + [ACCESS CODE]\*\*

\*\* If needed, press button(s) corresponding to desired partition(s). For two partitions, press the other key after the confirmation beep.

## PANIC ALARMS

To send a silent or audible alarm to your Security Company, press and hold one of the button combinations listed for 3 seconds.

Panic Alarm Type	Button Combinations
Police	Press [1] & [3]
Medical	Press [4] & [6]
Fire	Press [7] & [9]

## TROUBLE DISPLAY

When a trouble condition occurs, the **[TBL]** key will illuminate.

1. Press the **[TBL]** key. The key will flash and number(s) corresponding to the trouble(s) will illuminate.
2. Read the corresponding explanation of the trouble from the trouble list in the control panel User Guide. If no repair instructions are given, call your security company for repairs.
3. Press the **[CLEAR]** key to exit.

## BYPASS PROGRAMMING

Bypassed zones remained unarmed when the partition is armed.

1. Press the **[BYP]** key.
2. Enter your **[ACCESS CODE]\*\***.
3. The corresponding LED of all open zones will illuminate. Select the zone(s) you want to bypass by entering the two-digit zone number (i.e. zone 3 = 03). The corresponding zone LED will flash.
4. Press the **[ENTER]** key to save and exit.

## ALARM MEMORY DISPLAY

To view the alarms that occurred during the last armed period:

1. Disarm the system.
2. Press the **[MEM]** key.
3. The corresponding zone numbers that were in alarm the last time the system was armed will illuminate.
4. Press the **[CLEAR]** key to exit.

## KEYPAD SETTINGS

To mute the keypad:

Press and hold the **[CLEAR]** key for 6 seconds to enable or disable Keypad Muting.

To modify the backlight:

1. Press and hold the **[▲]** key for 3 seconds.
2. The **[MEM]** key will illuminate.
3. Press the **[▲]** key to set the desired backlight level.
4. Press **[CLEAR]** or **[ENTER]** to exit.

## CHIME PROGRAMMING

A Chime Enabled zone will advise you every time it is opened by causing your keypad to beep.

1. Press & hold the **[▼]** key for 3 seconds.
2. Select the zones you want to Chime by entering the two-digit zone number. The corresponding zone LED will flash. For example, to chime zone 2 enter **[0]** then **[2]**. The keypad will automatically save once the 2-digit zone number is entered.
3. Press the **[ENTER]** key to exit.

© Paradox Security Systems Ltd., 2005-2010. Magellan is a trademark or registered trademark of Paradox Security Systems Ltd. and its affiliates in Canada, the United States and/or other countries. All rights reserved.