


User Manual

Color video door phone CDV-70P





- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow
 instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

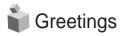

- Thank you for choosing COMMAX.
- Please read this manual carefully before you use the product.


Table of contents

Greetings	1
Contents table	1
1. Warnings and caution	2
2. Product Overview	4
3. Operation Methods	
4. Settings	6
5. Installation	8
6. Wiring	9
7. Part lists	11
8. Caution in use	12
9. Miscellaneous	12
10. Specification	12




1. Warnings and caution

Please follow the things described below in order to prevent any danger or property damage.

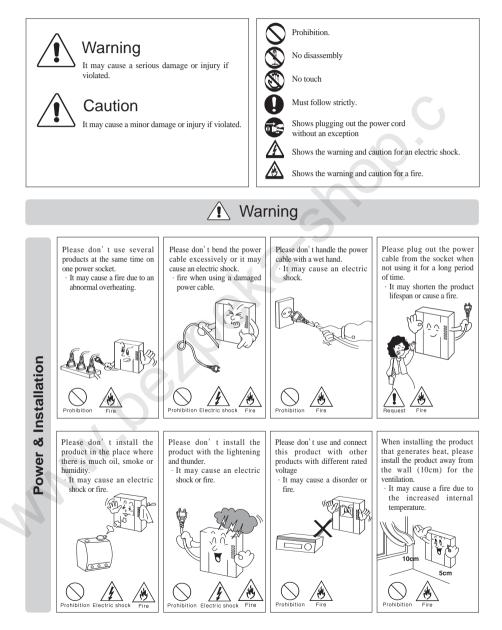


СОММАХ

2

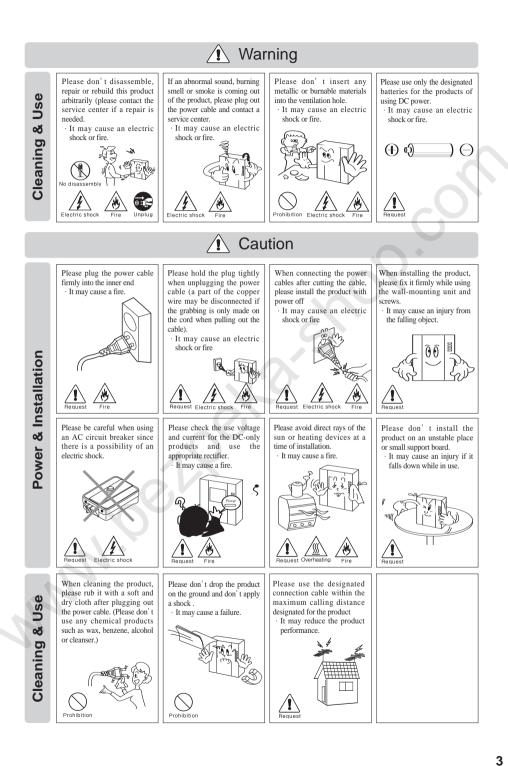



2. Product Overview

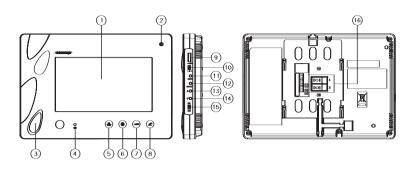

No.	Description	No.	Description
1	Monitor	10	Call Sound Level Control
2	Microphone	11	Menu Button
3	Speaker	12	Select Button
4	On/Off & status LED	13	Up Button (△)
5	Monitor Button	14	Down Button (♡)
6	Interphone Button	15	Power Switch
7	Door Release Button	16	Connector Terminal
8	Talk Button		
9	Talk Sound Level Control		

- 1. Monitor : You can check the visitor.
- 2. Microphone : You can talk with the visitor.
- 3. Speaker : You can hear the calling sound from the door camera.
- 4. On/Off & status LED : Show blue light when the monitor is turned on, no light when off.
- 5. Monitor Button : Press to see images from camera.
- 6. interphone Button : Press to call interphone.
- 7. Door Release Button : Press to open the door.
- 8. Talk Button : Press to talk with door camera.
- 9. Talk Sound Level Control : Use to adjust sound level during talking.
- 10. Call Sound Level Control : Use to adjust sound level of calling sound.
- MENU Button : Press to enter Menu for display adjustment, calling sound setting, product information etc.
- 12. Select Button : Press to select on menu.
- 13. Up Button : Press to move up on menu.
- 14. Down Button : Press to move down on menu.
- 15. Power Switch : Used to turn on/off power of the product.
- 16. Connector Terminal :
 - Used to connect other devices like door camera, door panel, or program update tool.

4

📦 3. Operation Methods

3-1. Receiving a calling from visitor.

① When the call button is pressed by a visitor on the door camera, the melody shall be rung and visitors' image is shown on the screen

(If you do not press the Talk Button, the display will be shown up for 30 seconds and turned off automatically).

- ② By pressing the Talk Button, you are able to talk with visitor. By pressing the Door Release Button, you can open the door for visitor(Door release function can be done only when the monitor is showing the visitor, on the camera which has door release function.)
- ③ When monitor and door camera are on talking, the 3-party talking is possible by picking up receiver of the interphone. (Camera-Monitor-Interphone talking at same time.)
- ④ By pressing Talk Button again you can end the talking and monitor comes back to stand-by mode.

3-2. Talk with Interphone.

- (1) Calling from the Interphone.
- ① You will hear calling sound when interphone call the monitor.
- ② Press Talk Button to talk with the interphone.
- ③ When monitor and interphone are on talking, the 3-party talking is possible by calling from the door camera. (Camera-Monitor-Interphone talking at same time.)
- (2) Calling the interphone from the monitor.
- ① Press Talk Button and Interphone Button in order to call the interphone from the monitor. (Interphone button should be pressed & held until the interphone answers.)
- ② Then talking is available by picking up the handset of interphone.

3-3. Monitoring : To see the visitor at the door.

(On stand-by mode) Operation

- By pressing the Monitor button repeatedly, the monitor will work as following in order. Camera 1 \rightarrow Camera 2 \rightarrow OFF \rightarrow Camera 1 \rightarrow

(On talking mode) Operation

 
- By pressing the Monitor button repeatedly, the monitor will work as following in order. Camera 1 → Camera 2 → Camera 1 → Camera 2 →

* Caution :

When you use only 1 camera, please connect the short pin(jumper), which is included in product packing, to the terminal "Camera 2 Select" on the back side of the product.

(When the short pin is connected, the camera 2 does not work.)





On talking or monitoring mode, press menu button on the right side of product, and press $\triangle/\bigtriangledown$ buttons to adjust display(brightness, contrast, color), to enter the Utility menu, to check the product information.

- Following 4 buttons on the right side of the product are used for setting.
- * Menu, End : MENU * Move up, right : △(UP Button)
- * Select, Input : SELECT * Move down, left : ▽(DOWN Button)

4-1. Display Setting (Brightness, Contrast, Color Adjustment)

On Setting Mode, move to Door Video Set and press Select button to enter the display setting mode.

- (1) BRIGHTNESS : To adjust brightness.
- (2) CONTRAST : To adjust contrast.
- (3) COLOR : To adjust color.
- * How to adjust
 - ① On DOOR VIDEO SET display press riangle / riangle to move to the item you want to adjust
 - ② Press Select Button to select the item.
 - (3) Adjust using $\triangle / \bigtriangledown$ buttons.
 - ④ Press Select Button again to finish.
- (4) RESET : Puts back settings to initial setting.
- * How to reset.
 - ① On DOOR VIDEO SET display move to RESET item.
 - 2 Press SELECT Button to select the item.
 - ③ Select YES using △/∇ buttons.
 - ④ Press SELECT button to reset.
- (5) EXIT : Return to Configuration mode
- % Setting
 - (1) Click $\triangle / \bigtriangledown$ button to move to EXIT in DOOR VIDEO SET menu
 - 2 Click SELECT button

4-2. UTILITY(Extra features)

Move to UTILITY and click SELECT button to enter below menu

(1) CHIME-BELL MUTE : Set call sound mute function

① Move to UTILITY from configuration mode and click SELECT. Then, move to CHIME-BELL MUTE using \triangle / \bigtriangledown button

- 2 Click SELECT button
- 3 Control the volume with $\bigtriangleup / \bigtriangledown$ button



- ④ After the setting, click SELECT button
- (2) EXIT : Return to configuration mode
- * Setting
 - ① Move to EXIT in UTILITY MODE by using $\triangle / \triangledown$ button
 - ② Click SELECT button to choose

4-3. INFORMATION (Model and Version checking)

Click \triangle / ∇ button to check the Model and version in configuration mode


- (1) Model : The name of Model
- (2) Version : The version of the product
- (3) VIDEO : The video type of the product
- (4) SOURCE : The location of the image

4-4. EXIT(End configuration)

Move to EXIT and click Select button.




1. Installation Method of camera monitor

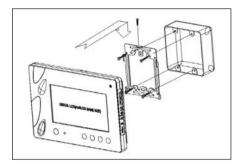

<u>∕</u>Note


- ① Avoid the range of direct sunlight
- ② Recommended height is pertinent from 1450 ~ 1500mm
- ③ Avoid the installation near magnetic activity, humid temperatures and gas

2. Installation Method of camera

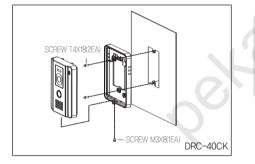


A Note

 - Do not install the camera where it is exposed to Direct sunlight
- ② Keep cleaning up its lens to capture good views.



CAMERA CONNECTOR POLARITY

1. RED : VOICE 2. BLUE : GND 3. YELLOW : POWER(+12V) 4. WHITE : VIDEO

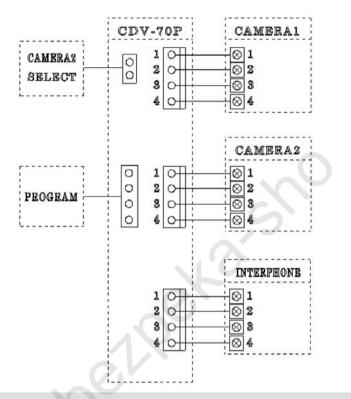


CAMERA2 SELECT : Decide if you use Camera No.2 or not (Please insert the enclosed short pin, if you do not want to use Camera No.2)

Caution on the Wiring


Be sure to use a separate wiring for each connect 2lines of UTP CABLE[CAT.5] are required if UTP CABLE[CAT.5] is used for CAMERA1 and CAMERA2



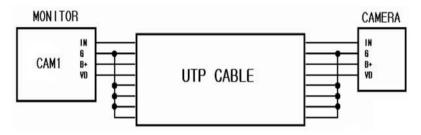



• If UTP CABLE[CAT.5] is used, use 5 lines for GND line.

INTERPHONE Wiring

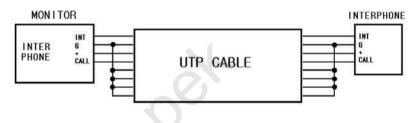

 • If UTP CABLE[CAT.5] is used, use 5 lines for GND line.



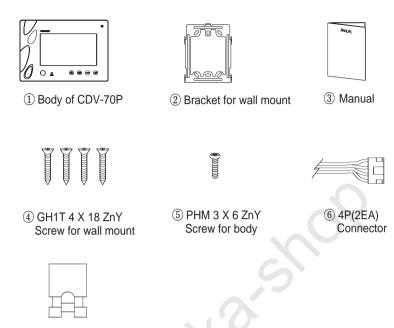

- ⑦ 2P SHUNT Only No. 1 camera is available if you insert 2P shunt(short pin)
- ① Monitor(CDV-70P)
- 2 Wall bracket
- ③ Manual
- ④ Mounting Screw (SCREW GH1T 4X18 ZnY) 4EA
- (5) Monitor fixing screw (SCREW PHM 3X6 ZnY) 1EA
- 6 Connector (CONN. 4PX300) 2EA
- ⑦ Camera 2 Short pin (PIN 2P SHUNT(A2095)) 1EA



- 1. Turn on the power switch.
- 2. Please contact your local agent for product maintenance when you have a problem in use of CDV-70P
- 3. For your safety, power switch with a safety device must be used in your building.
- 4. Unplug before installing or repairing the product.
- 5. Unplug when you connect monitor with door cameras.



🔰 9. Miscellaneous

 Please carefully read this User's Guide before calling service man After checking the entire check list, please contact customer service center. We will do our best to make you satisfy with our services.

10. Specification

MODEL	CDV-70P			
Transmission way	Door camera 4wires (Polarity), interphone 4wires (polarity)			
Rating Voltage	100V-240V~, 50/60Hz (FREE VOLTAGE)			
Power consumption	On stand-by : 3.5W	On talk: 15W		
Transmission way	HANDS FREE (Voice switch circuit)			
Monitor	7" TFT-DIGITAL LCD			
Call sound	Door : Electronic chime (Sol Mi Do), interphone : Beep			
Display	Monitoring : 30 \pm 5sec , Talk : 60 \pm 5sec			
Distance	Pie 0.5mm	0.65mm	0.8mm	
	28m	50m	70m	
Working temperature	0 ~+40°C (32°F ~ 104°F)			
Dimension	243.0(W) X 168.0(H) X 30.0(D)			

